

# Remote Control Operation Guide

Model No. EUR7622KB0

# Panasonic®

First, turn on the receiver.

RECEIVER

 


Now, operate your other Home Theater components

① DVD



② VCR

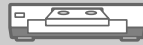

③ TV/CATV



④ RADIO




⑤ RECEIVER




Actual operations depend on your equipment and software. Be sure to read the instructions for the receiver and your other components.

## You may need to enter a code to operate some equipment.


### Changing the codes

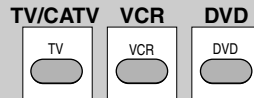

Press and hold the button corresponding to the equipment

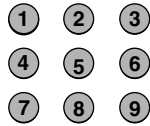

Enter the first digit

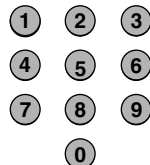

Enter the second digit

The remote control outputs the on/off signal. If the code is correct, the equipment turns on or off. If it doesn't, try entering another code.

This remote control can operate Panasonic and Technics audiovisual equipment that have remote control sensors. You may need to change the remote control code.


It can also operate some other brands of televisions, video cassette players, and DVD players. Check the table for the brand and enter the code as follows.

- Note that this remote control cannot operate some equipment and that it may not be able to perform some operations.
- Reenter the codes after you change the batteries.

**Code table** (You cannot control both TV and CATV with this remote control.)

	TV	CATV	VCR	DVD
Panasonic	01,02,26	37,38,41,69,71	01,33	01,40
Aiwa	—	—	—	23
Apex	—	—	—	20,35,36
Bose	—	—	—	39
Denon	—	—	—	17
Fisher	14	—	13,14,15,18	—
Funai	—	—	08	—
G.E.	02,03,09	—	03,04,11	—
Gemini	—	64	—	—
GI	—	50	—	—
GoldStar	15	—	27	—
Hitachi	05	—	10,11	11
Hamlin	—	45,62,63,65	—	—
Harman Kardon	—	—	—	34
Jerrold	—	46,47,48,49,51,52	—	—
		53,54,61,67,70		
JVC	12	—	19,38,39,40	09
Kenwood	—	—	—	15,29
Konka	—	—	—	19
Koss	—	—	—	31
Macom	—	32,33	—	—
Magnavox	06,07,11,22	—	02,09,12	—
Mintek	—	—	—	38
Mitsubishi	16	—	21,22,28,29	06
NEC	—	—	25,31	—
Nextbase	—	—	—	37

	TV	CATV	VCR	DVD
Onkyo	—	—	—	21,33
Oritron	—	—	—	24
Philips	—	35,36,55,56	12	16
		57,58,68		
Pioneer	19	31,43	—	03
Quasar	02	—	—	—
Raite	—	—	—	13
RCA	03,13,23,24,25	42	10,26	02
Regency	—	60	—	—
SA	—	39,40	—	—
Sampo	—	—	—	14
Samsung	—	34	—	10
Sanyo	—	—	34	—
Sharp	08,21	—	16,17	08
Shintom	—	—	32	—
Silvania	—	—	—	18
SMC	—	—	—	25
Sony	04	—	05,06,07,35	05,26,27
			36,37	28
Symphonic	17	—	30	—
Toshiba	10	66	23,24	04
Unika	—	59	—	—
Venturer	—	—	—	32
Wave	—	—	—	22
Yamaha	—	—	—	30
Zenith	18,20	30,44	20	07,12

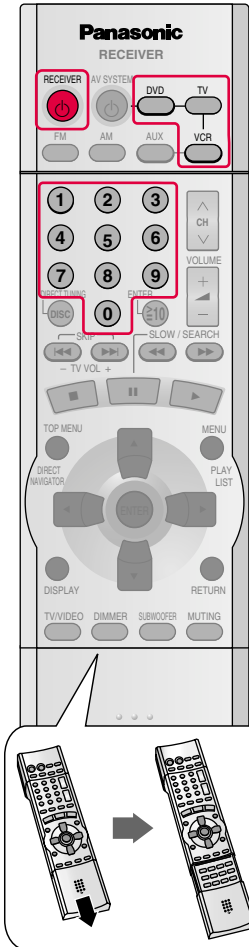


# 1 DVD

## Watching DVDs

### Switch on



 Switch on the television and select input




Switch on the player and start play


### Switch off


 
## Operating the DVD player




Show disc menus

 



Show disc menus



 
Show player menus

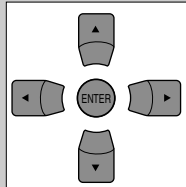

Select and enter menu items

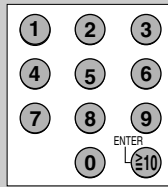  

Start play from a selected item

 


Skip items during play



Search through the disc



 Stop play




Pause play



## Operating the DVD player



 
Start slow-motion play



To view frame-by-frame

  



Specify a disc [5-disc changer]

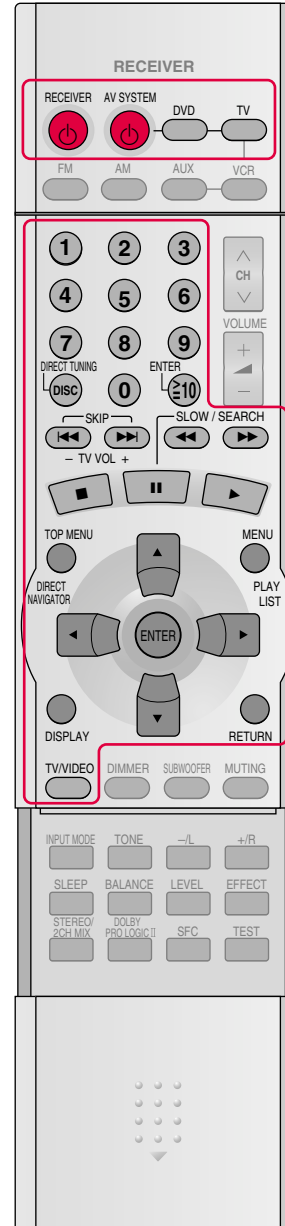 


## ② VCR

### Watching videotapes
  
#### Switch on

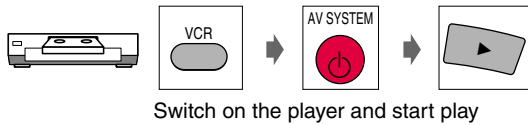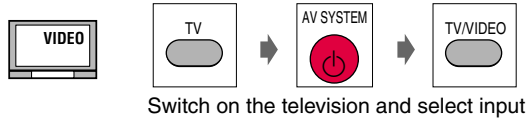


#### Switch off

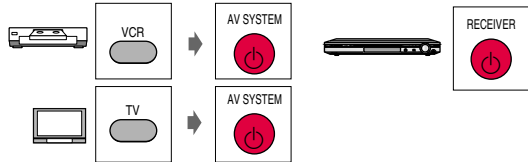 

### Operating the video deck




Rewind or fast-forward

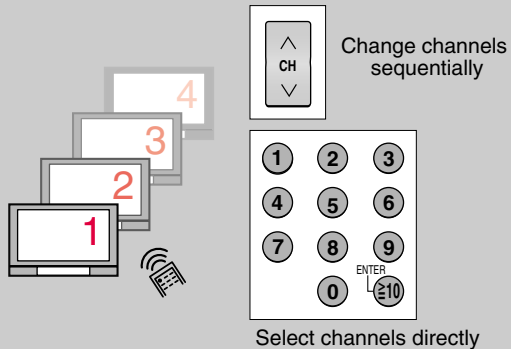

Stop play



Pause play

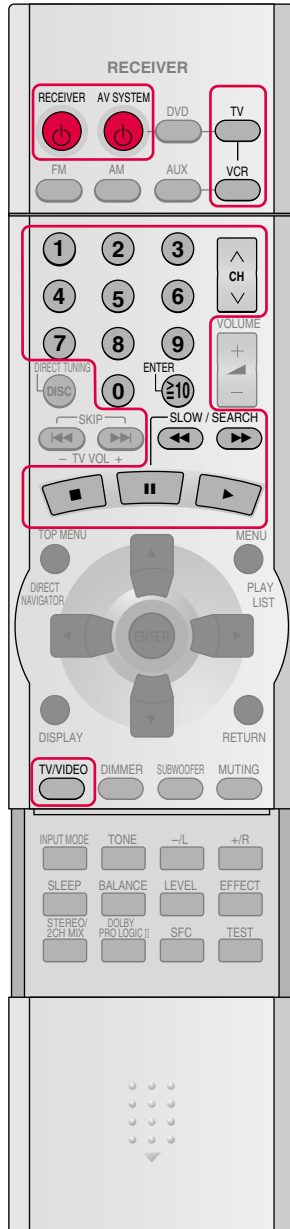

## ③ TV/CATV

### Watching TV/CATV



#### Switch on



#### Switch off




### Operating the TV/CATV

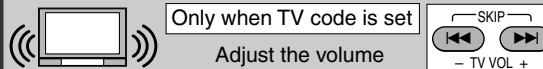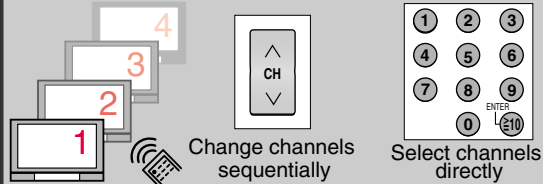

## ④ RADIO
 
### Listening to the radio




Select FM or AM



#### Switch off



### Operating the radio

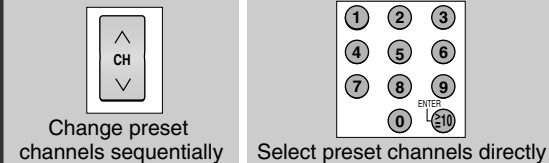


Select radio stations by frequency

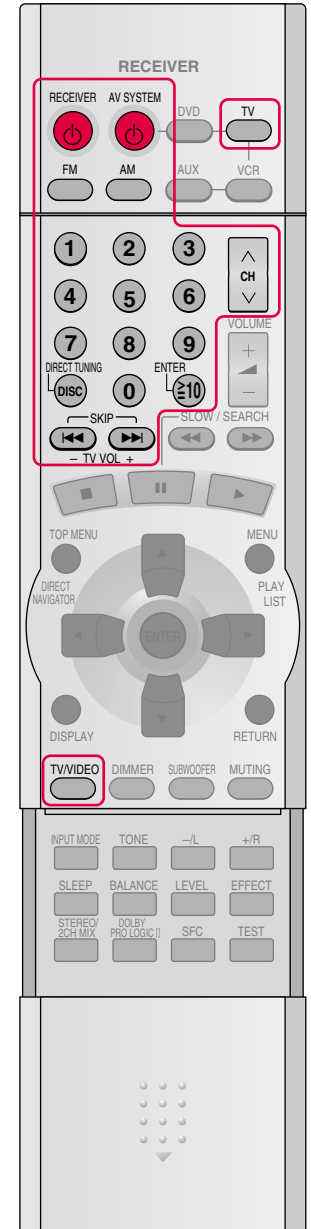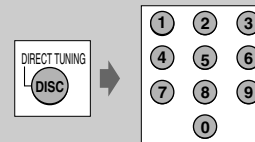

# 5 RECEIVER


## DOLBY PRO LOGIC II MODE

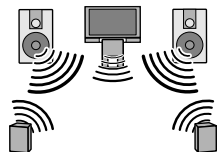

Select a Dolby Pro Logic II mode: MOVIE, MUSIC or PANORAMA




When you select MUSIC or PANORAMA

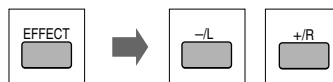

Change the sound effect


## SFC MODE

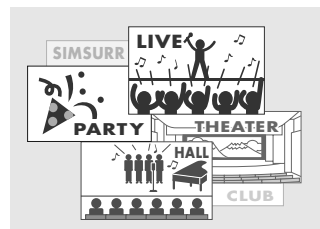


Select HALL, CLUB, LIVE, THEATER, SIM SURR or PARTY



Select the speaker channel and adjust its output level

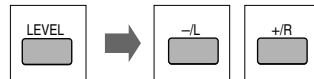

Change the delay time

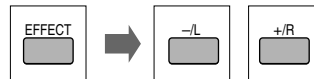

## Adjusting speaker channel balance




Start a test signal



Select the speaker channel and adjust its output level



Stop the test signal

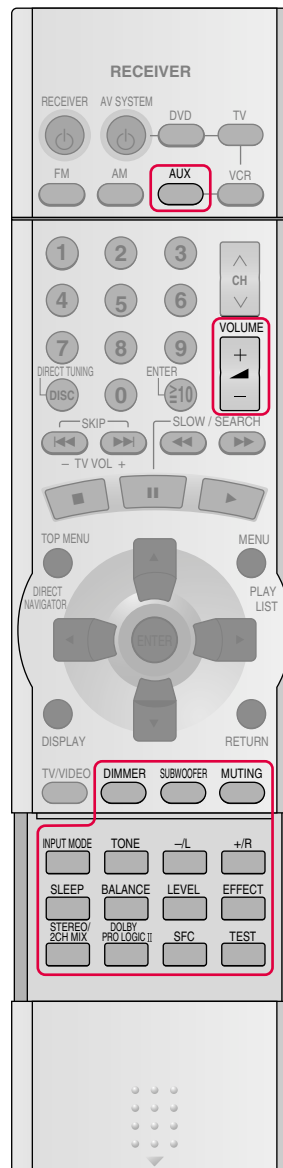

## Other functions



Select STEREO or 2CH MIX mode



Mute the volume



Adjust subwoofer output level



Adjust the volume

Select AUTO, ANALOG or DIGITAL



Select BASS or TREBLE and adjust its level



Adjust the front L/R channel balance



Dim the display and turn off the panel light



Set the sleep timer



Select AUX

