

取扱説明書 /Operating Instructions/
Instrucciones de funcionamiento/
Mode d'emploi/

تعليمات التشغيل / 使用说明书

ハンドルユニット /Handle unit/Unidad del asa/
Poignée/وحدة الذراع / 手柄単元

品番 /Model No./Modelo N./Modèle/ طراز رقم / 型号

VW-HU1
VW-HU1GK

DVQX2755ZA
F0325MZ0

厦門松下電子信息有限公司
中国福建省厦门市火炬高技术产业开发区

原产地: 中国
标准代号: Q/XMSX 198

保証書付き

Panasonic Entertainment
& Communication Co., Ltd.
Web Site: <http://www.panasonic.com>

パナソニック株式会社
パナソニック エンターテインメント
& コミュニケーション株式会社
〒570-0021 大阪府守口市八雲東町 1 丁目 10 番 12 号
© Panasonic Entertainment & Communication Co., Ltd. 2025

2025 年 3 月 发 行
在中国印刷

Printed in China/Impreso en China/Imprimé en Chine



Panasonic

持込修理


ハンドルユニット保証書

本書はお買い上げの日から下記期間中故障が発生した場合には
本書裏面記載内容で無料修理を行うことをお約束するものです。
ご記入いただきました個人情報の利用目的は本書裏面に記載し
ております。お客様の個人情報に関するお問い合わせは、お買い
上げの販売店にご連絡ください。詳細は裏面をご参照ください。

品 番	VW-HU1
保証期間	お買い上げ日から 本体 1年間
※ お買い上げ日	年 月 日
※ ご住所	
※ お名前	様
※ 電 話	() -
※ 住所・販売店名	
※ 販 売 店	
※ 電 話	() -

パナソニック株式会社
パナソニック エンターテインメント & コミュニケーション株式会社
〒570-0021 大阪府守口市八雲東町1丁目10番12号 修理ご相談窓口 (0120) 878-554

ご販売店様へ ※印欄は必ず記入してお渡しく下さい。

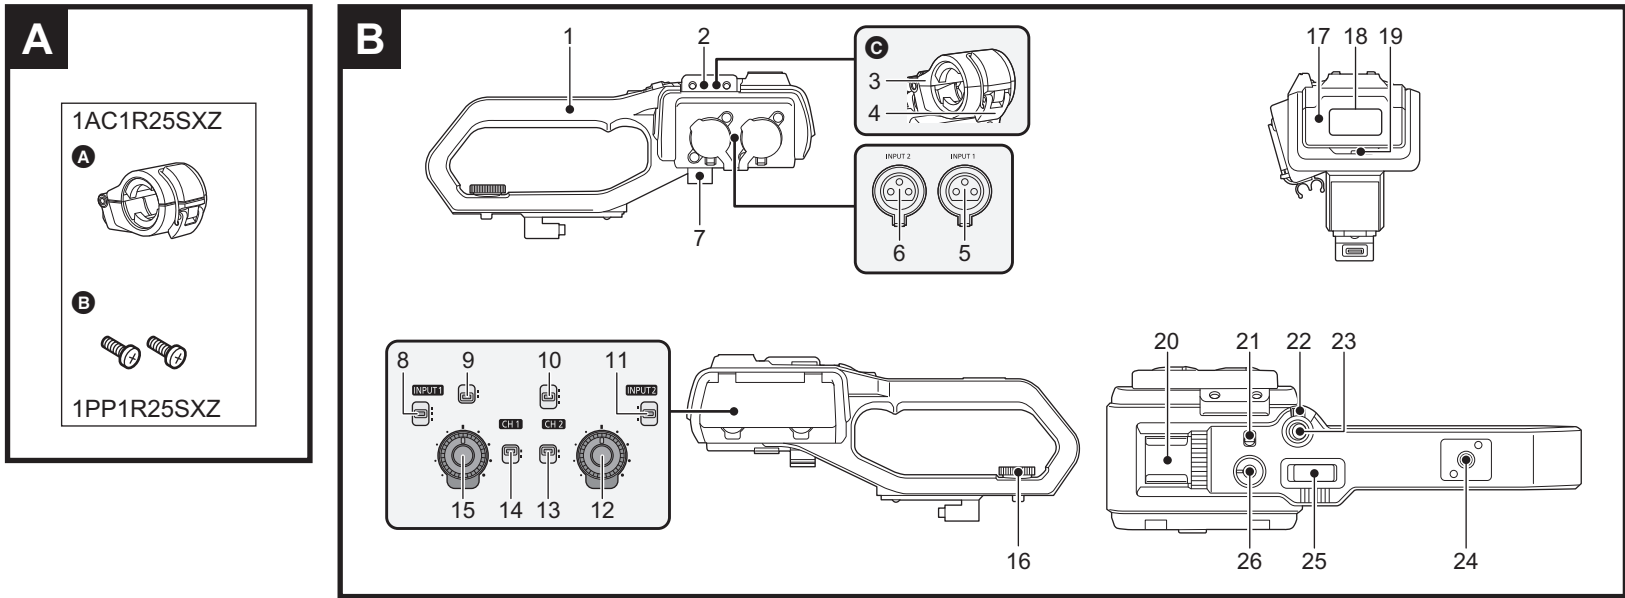

日本語

- このたびは、パナソニック製品をお買い上げいただき、まことにありがとうございます。
- 取扱説明書をよくお読みのうえ、正しく安全にお使いください。
 - ご使用前に「安全上のご注意」を必ずお読みください。
 - 保証書は「お買い上げ日・販売店名」などの記入を確かめ、取扱説明書とともに大切に保管してください。
 - 本製品はデジタル 4K ビデオカメラ HC-X1500/HC-X1600 に取り付け、次の機能を使用できます。
 - － オーディオ機器 / 外部マイク (XLR、3 ピン) の使用
 - － 内蔵 LED ライト
 - － ハンドルユニットの REC ボタン
 - － スームレバー
 - － タリールンプ
 - カメラのイラストは HC-X1500 を掲載しています。
 - 使い方については、デジタル 4K ビデオカメラの取扱説明書をお読みください。
 - デジタル 4K ビデオカメラは別売です。
 - 本製品使用時に生じた本製品およびカメラ本体の落下による事故や破損・故障については、責任を負いかねますので、あらかじめご了承ください。
 - 本書で説明する製品の外観と仕様は、実際とは異なる場合があります。

安全上のご注意 (必ずお守りください)

人への危害、財産の損害を防止するため、必ずお守りいただくこと
を説明しています。

■ 誤った使い方をしたときに生じる危害や損害の程度を
区分して、説明しています。

警告 「死亡や重傷を負うおそれがある内容」です。

注意 「軽傷を負うことや、財産の損害が発生するおそれがある内容」です。

■ お守りいただく内容を次の図記号で説明しています。
(次は図記号の例です)

	してはいけない内容です。
--	--------------

警告

- 内部に金属物を入れたり、水などの液体をかけたりめしたりしない
ショートや発熱により、火災・感電・故障の原因になります。
 - 機器の近くに水などの液体の入った容器や金属物を置かないでください。

- マイクホルダー用ねじ、ライトカバーは、乳幼児の手の届くところに置かない
誤って飲み込むと、身体に悪影響を及ぼします。
 - 万一、飲み込んだら、すぐに医師にご相談ください。

- 分解、改造をしない
内部には電圧の高い部分があり、感電の原因になります。

分解禁止

注意

- 次のような場所に放置しない
火災や感電の原因になることがあります。
 - 異常に温度が高くなる場所 (特に真夏の車内やボンネットの上など)
 - 油煙や湯気の当たるところ
 - 湿気やほこりの多いところ

■ 本製品 (付属品を含む) に表示の記号は以下を示しています。

=== DC (直流)

A 付属品

- 付属品をご確認ください。
 - ❶ ☐ マイクホルダー
 - マイクホルダー用ねじはマイクホルダーに同梱しています。
 - ❷ ☐ マイクホルダー用ねじ
 - 長さ 12 mm (2 本)

付属品は販売店でお買い求めいただけます。
パナソニックの家電製品直販サイトでお買い求めいただけるものもあります。
詳しくはパナソニックの家電製品直販サイトをご覧ください。
パナソニックグループのショッピングサイト
<https://ec-plus.panasonic.jp/>

B 各部の名前

- ハンドル
- マイクホルダー取り付け部
- マイクホルダー (❶ マイクホルダー取り付け時)
- バックル (❷ マイクホルダー取り付け時)
- <INPUT 1> 端子 (XLR、3 ピン)
- <INPUT 2> 端子 (XLR、3 ピン)
- マイクケーブルクランプ
- <INPUT1> スイッチ
- CH1 SELECT スイッチ
- CH2 SELECT スイッチ
- <INPUT2> スイッチ
- <AUDIO LEVEL CH2> つまみ
- <CH2> スイッチ
- <CH1> スイッチ
- <AUDIO LEVEL CH1> つまみ
- ハンドルユニット取り付けねじ
- ライトカバー
- 内蔵 LED ライト
- タリールンプ
- アクセサリシュー (ハンドル側)
- <LIGHT> スイッチ
- ホールレバー
- REC ボタン (ハンドル側)
- アクセサリ取り付け穴
- スームレバー (ハンドル側)
- 調光ダイヤル

C ハンドルユニットの取り付け

- カメラ本体の電源を切った状態で取り付けてください。

- マイクホルダーを開く。
バックル ❶ を開き、金具 ❷ をフック ❸ から外してください。
- ハンドルユニットのマイクホルダー取り付け部に、マイクホルダーを取り付ける。
 - ❹ マイクホルダー用ねじ
 - ❺ マイクホルダー
 - 市販のドライバーを使って取り付けてください。
 - マイクホルダー用ねじを取り付ける際にゴムとの摩擦音がありますが、しっかりと締め付けてください。
- ハンドルユニットをカメラ本体のハンドルユニット取り付け部に差し込む。
ハンドルユニットの取り付けマーク ❶ とカメラ本体の取り付けマーク ❷ の位置を合わせて、差し込んでください。
- ハンドルユニットを矢印の方向にスライドする。
取り付けマーク ❸ の位置までスライドしてください。
- ハンドルユニット取り付けねじを下方向に押し込みながら、矢印 ❹ の方向に止まるまで回す。
 - 取り外し方
取り付け方と逆の手順で取り外してください。

仕様

入力電圧: 23.6 V/5 V/3.15 V ==
消費電力: 最大約 3.1 W (カメラ本体に接続時)

外形寸法 (幅 × 高さ × 奥行き): 約 71 mm×89 mm×207 mm (突起部分を含む、マイクホルダーを除く)
質量: 約 305 g (ハンドルユニット本体のみ、マイクホルダー、マイクホルダー用ねじを除く)

保証とアフターサービス (よくお読みください)

使いかた・お手入れ・修理などは

- まず、お買い上げの販売店へご相談ください。

▼お買い上げの際に記入されると便利です

販売店名	
電話 () -	
お買い上げ日	年 月 日

修理を依頼されるときは
この取扱説明書をよくお読みのうえ、直らないときは、お買い上げ日と下の内容をご連絡ください。
ハンドルユニットの修理を依頼されるときは、ビデオカメラに原因がある場合がありますので、お使いのビデオカメラと一緒に修理をご依頼ください。

●製品名	ハンドルユニット
●品 番	VW-HU1
●故障の状況	できるだけ具体的に

- 保証期間中は、保証書の規定に従ってお買い上げの販売店が修理をさせていただきますので、おそれ入りますが、製品に保証書を添えてご持参ください。
保証期間: お買い上げ日から本体 1 年間
- 保証期間終了後は、診断をして修理できる場合はご要望により修理させていただきます。
※ 修理料金は次の内容で構成されています。

技術料	診断・修理・調整・点検などの費用
部品代	部品および補助材料代
出張料	技術者を派遣する費用

※ 補修用性能部品の保有期間 **8 年**
当社は、本製品の補修用性能部品 (製品の機能を維持するための部品) を、製造打ち切り後 8 年保有しています。

- 転居や贈答品などでお困りの場合は、次の窓口にご相談ください。

サポート総合窓口 <https://panasonic.jp/support>

0120-878-638
受付時間 9:00~18:00 月~土曜日
(祝日 正月三日を除く)
■ 上記電話番号がご利用いただけない場合
06-6907-1187 ■ FAX フリーダイヤル
0120-878-236

Help desk for foreign residents in Japan
Tokyo (03) 3256-5444 Osaka (06) 6645-8787
Open: 9:00 - 17:30 (closed on Saturdays/Sundays / national holidays)

修理に関するご相談窓口
パナは **イイヨ**
■ 上記電話番号がご利用いただけない場合
03-6633-6700
<https://panasonic.jp/support/repair.html>

掲載サイトおよび動画の視聴は無料ですが、通信料金はお客様のご負担となります。
(パケット定額サービスに未加入の場合、高額になる可能性があります)
●ご利用の回線 (IP 電話やひかり電話など) によっては、回線の遅延時に数分で切れる場合があります。
●上記の URL はお使いの携帯端末等により、正しく表示されない場合があります。

【ご相談窓口におけるお客様の個人情報の取り扱いについて】
パナソニック株式会社およびグループ関係会社は、お客様の個人情報をご相談対応や修理対応などに利用させていただき、ご相談内容は録音させていただきます。
また、折り返し電話をさせていただくために発信番号を通知いたしております。
なお、個人情報を適切に管理し、修理業務等を委託する場合や正当な理由がある場合を除き、第三者に開示・提供いたしません。
個人情報に関するお問い合わせは、ご相談いただきました窓口にご連絡ください。

ENGLISH

Information for Your Safety

WARNING:

- To reduce the risk of fire, electric shock or product damage,
- Do not expose this unit to rain, moisture, dripping or splashing.
- Do not place objects filled with liquids, such as vases, on this unit.
- Use the recommended accessories.
- Do not remove covers.
- Do not repair this unit by yourself. Refer servicing to qualified service personnel.

This unit is intended for use in moderate and tropical climates.

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

FCC Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

- Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Supplier's Declaration of Conformity
Trade Name: Panasonic
Model No.: VW-HU1
Responsible Party: Panasonic Corporation of North America
Two Riverfront Plaza, Newark, NJ 07102-5490
Support Contact: <http://shop.panasonic.com/support>

[For U.S.A.]
To dispose of your product, please recycle in accordance with local environmental regulations.
For further recycling please visit
<https://shop.panasonic.com/recycle>

Precautions

Thank you for purchasing this Panasonic product.

- Please read these instructions carefully before using this product, and save this manual for future use.
- The following functions can be used when this product is attached to a 4K Video Camera HC-X1500/HC-X1600:
 - － Using audio equipment/external microphone (XLR, 3-pin)
 - － Built-in LED light
 - － REC button (on the handle)
 - － Zoom lever (on the handle)
 - － Tally lamp
- HC-X1500 is used in the camera illustrations.
- For details about the above functions and the operation of the handle unit, refer to the operating instructions for the 4K Video Camera.
- The 4K Video Camera is not supplied.
- Be aware that Panasonic accepts no responsibility for any incidents, damage, or malfunctions occurring due to dropping of this product or the camera while using this product.
- When requesting a repair for the handle unit, request a repair for the video camera as well, as the cause of the problem may be in the video camera.
- The external design and specifications of this product, as described in this document, may differ from the actual product.
- Illustrations used in this document may differ from the actual product and the actual images displayed on the product.

A Accessories

Check the accessories before using this unit.

- ❶ Microphone holder
 - The microphone holder mounting screws are supplied with the microphone holder.
- ❷ Microphone holder mounting screws
 - Length 12 mm (0.47 ") (x2)
- Keep the microphone holder mounting screws out of reach of children to prevent swallowing.

B Names of the components

- Handle
- Microphone holder mounting section
- Microphone holder (❶ With a microphone holder attached)
- Buckle (❷ With a microphone holder attached)
- <INPUT 1> terminal (XLR, 3-pin)
- <INPUT 2> terminal (XLR, 3-pin)
- Microphone cable clamp
- <INPUT1> switch
- CH1 SELECT switch
- CH2 SELECT switch
- <INPUT2> switch
- <AUDIO LEVEL CH2> dial
- <CH2> switch
- <CH1> switch
- <AUDIO LEVEL CH1> dial
- Handle unit mounting screw
- Light cover
 - Keep the light cover out of reach of children to prevent swallowing.
- Built-in LED light
- Tally lamp
- Accessory shoe (on the handle)
- <LIGHT> switch
- Hold lever
- REC button (on the handle)
- Accessory mounting hole
- Zoom lever (on the handle)
- Light dimmer dial

C Attaching the handle unit

- Attach while the power of the camera is turned off.

- Open the microphone holder.
Open buckle ❶, and detach fitting ❷ from hook ❸
- Attach the microphone holder to the microphone holder mounting section on the handle unit.
 - ❹ Microphone holder mounting screws
 - ❺ Microphone holder
 - Attach using a commercially-available screwdriver.
 - There will be some rubbing noises with the rubber when screwing in the microphone holder mounting screws, but please ensure they are done up lightly.
- Push the handle unit into the handle unit mounting section on the camera.
Match the positions of mounting mark ❶ on the handle unit and mounting mark ❷ on the camera when pushing in.
- Slide the handle unit in the direction indicated by the arrow.
Slide up to mounting mark ❸
- While pressing the handle unit mounting screw down, turn it in the direction indicated by arrow ❹ until it stops.

- How to remove

Remove by doing the steps for attaching in reverse.

Specifications

Input voltage: 23.6 V/5 V/3.15 V ==
Power consumption: Maximum approx. 3.1 W (when connected to the camera)

External dimensions (W×H×D):
Approx. 71 mm ×89 mm ×207 mm (Approx. 2.8 "×3.5 "×8.2 ")
(including protrusions, excluding microphone holder)
Mass (Weight):
Approx. 305 g (Approx. 0.67 lbs.)
(main part of the handle unit only, excluding microphone holder and microphone holder mounting screws)

The symbols on this product (including the accessories) represent the following:

=== DC

United States customers:
Limited Warranty: 90 days from the date of purchase
This warranty does not include damages caused by accidents, misuse or modifications. If the item is defective within the warranty period, we will repair or replace it, with new or refurbished parts, without charge or refund your purchase price at our option. For further information on defective product within the warranty period please visit our Support page.
www.panasonic.com/support

Canadian customers:
For product information and operation assistance, please visit our Support page.
www.panasonic.ca/english/support
For defective product exchange within the warranty period, please contact the original dealer.

