Panasonic


Installation Instructions

Over the Range Microwave Oven

BEFORE YOU BEGIN

Read these instructions completely and carefully.

- **IMPORTANT** Save these instructions for local inspector's use.
- **IMPORTANT** Observe all governing codes and ordinances.
- Note to Installer Be sure to leave these instructions with the Consumer.
- Note to Consumer Keep these instructions for future reference.
- **Skill level** Installation of this appliance requires basic mechanical and electrical skills.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under the Warranty.

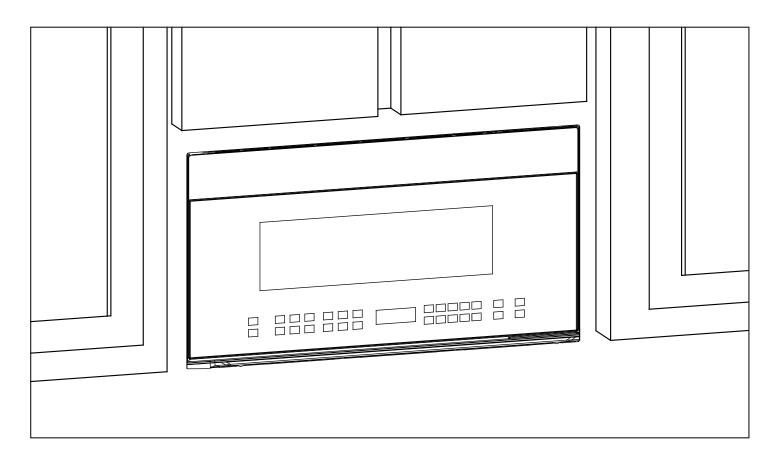

READ CAREFULLY. KEEP THESE INSTRUCTIONS.

Printed in China

CONTENTS

General information

Important Safety Instructions	3
Electrical Requirements	3
Damage - Shipment/Installation	4
Parts Included	4
Tools You Will Need	5
Mounting Space	5


Step-by-step installation guide

Placement of The Mounting Plate 6-8
Removing the Mounting Plate
Finding the Wall Studs6
Determining Wall Plate Location
Aligning the Wall Plate
Installation Types
Hood Exhaust 10-11
A Outside Top Exhaust 12–15
Attach Mounting Plate to Wall12
Preparation of Top Cabinet13
Adapting Microwave Blower for
Outside top Exhaust 13-14
Checking for Proper Damper Operation 14
Mount the Microwave Oven14-15
Adjust the Exhaust Adaptor15
Connecting Ductwork15
B Outside Back Exhaust 16–19
Preparing Rear Wall for Outside Back Exhaust 16
Remove Blower Plate16
Attach Mounting Plate to Wall17
Preparation of Top Cabinet17

Adapting Microwave Blower for Outside Back Exhaust 17–18
Mount the Microwave Oven19
C Recirculating 20 – 22
Attach Mounting Plate to Wall 20
Preparation of Top Cabinet21
Check Blower Plate21
Mount the Microwave Oven21-22
Installing or Change the
Charcoal Filter22
Before You Use Your Microwave
Template Information 25

IMPORTANT SAFETY INSTRUCTIONS

This product requires a three-prong grounded outlet. The installer must perform a ground continuity check on the power outlet box before beginning the installation to ensure that the outlet box is properly grounded. If not properly grounded, or if the outlet box does not meet electrical requirements noted (under ELECTRICAL REQUIREMENTS), a qualified electrician should be employed to correct any deficiencies.

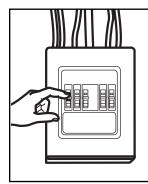


CAUTION: For personal safety, remove house fuse or open circuit breaker before beginning installation to avoid severe or fatal shock injury.

CAUTION: For personal safety, the mounting surface must be capable of supporting the cabinet load, in addition to the added weight of this 63–85 pound (28.5–38.5 kg) product, plus additional oven loads of up to 50 pounds (22.7 kg) or a total weight of 113–135 pounds (51.3–61.2 kg).

CAUTION: For personal safety, this product cannot be installed in cabinet arrangements such as an island or a peninsula. It must be mounted to BOTH a top cabinet AND a wall.

NOTE: For easier installation and personal safety, it is recommended that two people install this product.

IMPORTANT – PLEASE READ CAREFULLY. FOR PERSONAL SAFETY, THIS APPLIANCE MUST BE PROPERLY GROUNDED TO AVOID SEVERE OR FATAL SHOCK.

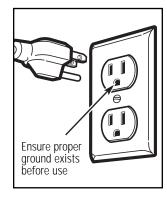

The power cord of this appliance is equipped with a three-prong (grounding) plug which mates with a standard three-prong (grounding) wall receptacle to minimize the possibility of electric shock hazard from this appliance. You should have the wall receptacle and circuit checked by a qualified electrician to make sure the receptacle is properly grounded.

Where a standard two-prong wall receptacle is encountered, it is very important to have it replaced with a properly grounded three-prong wall receptacle, installed by a qualified electrician.

DO NOT, UNDER ANY CIRCUMSTANCES, CUT, DEFORM OR REMOVE ANY OF THE PRONGS FROM THE POWER CORD. DO NOT USE WITH AN EXTENSION CORD.

ELECTRICAL REQUIREMENTS

Product rating is 120 VAC, 60 Hz, 15 amps and 1.55 kilowatts. This product must be connected to a seperate and dedicated supply circuit of the proper voltage and frequency. Wire size must conform to the requirements of the National Electrical Code or the prevailing local code for this kilowatt rating. The power supply cord and plug should be brought to a seperate and dedicated 15-20 ampere branch circuit single grounded outlet. The outlet box should be located in the cabinet above the microwave oven. The outler box and supply circuit should be installed by a qualifed electrician and conform to the National Electrical Code or the prevailing local code.

DAMAGE—SHIPMENT/ INSTALLATION

- If the unit is damaged in shipment, return the unit to the store in which it was bought for repair or replacement.
- If the unit is damaged by the customer, repair or replacement is the responsibility of the customer.
- If the unit is damaged by the installer (if other than the customer), repair or replacement must be made by arrangement between customer and installer.

PARTS INCLUDED

HARDWARE PACKET


PART	QUANTITY			
- Contraction	Wood Screws (1/4" x 2")	2		
	Toggle Bolts (and wing nuts) (3/16" x 3")			
	Self-Aligning Machine Screws (¼"-28 x 3¼")	3		
and the second	Nylon Grommet (for metal cabinets)	1		

You will find the installation hardware contained in a packet with the unit. Check to make sure you have all these parts.


NOTE: Some extra parts are included.

PARTS INCLUDED (CONT.) ADDITIONAL PARTS

PART		QUANTITY
	Top Cabinet Template	1
	Rear Wall Template	1
INSTALLATION INSTRUCTIONS	Installation Instructions	1
	Use & Care Manual	1
	Separately Packed Grease Filters	2
	Exhaust adaptor	1
	Glass Tray	1
	Turntable Ring	1

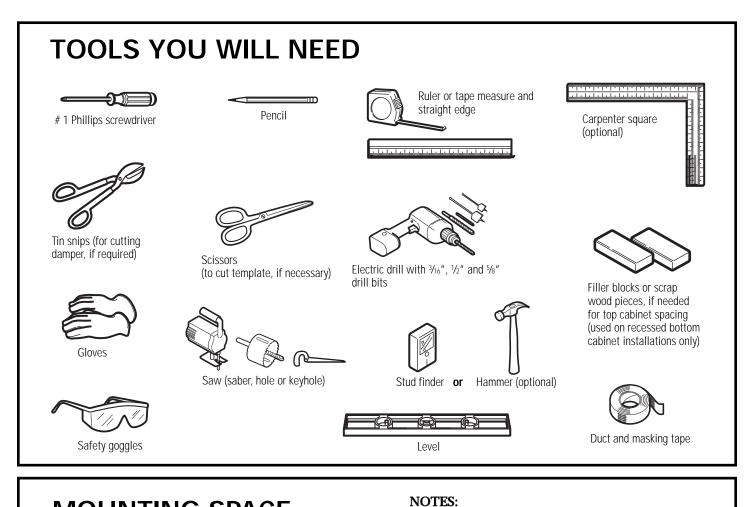


MOUNTING SPACE

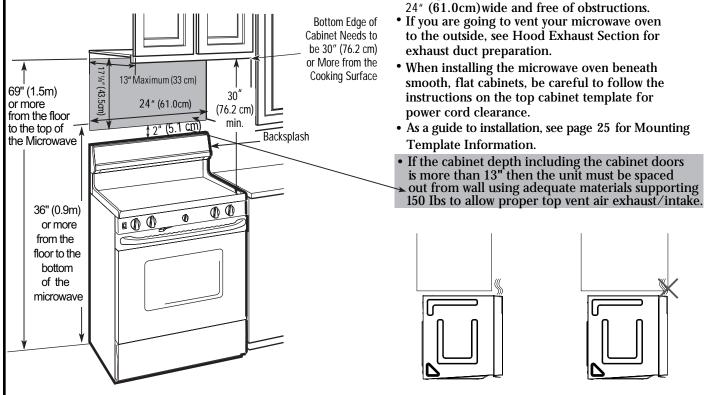



• The space between the cabinets must be

PLACEMENT OF THE MOUNTING PLATE

1

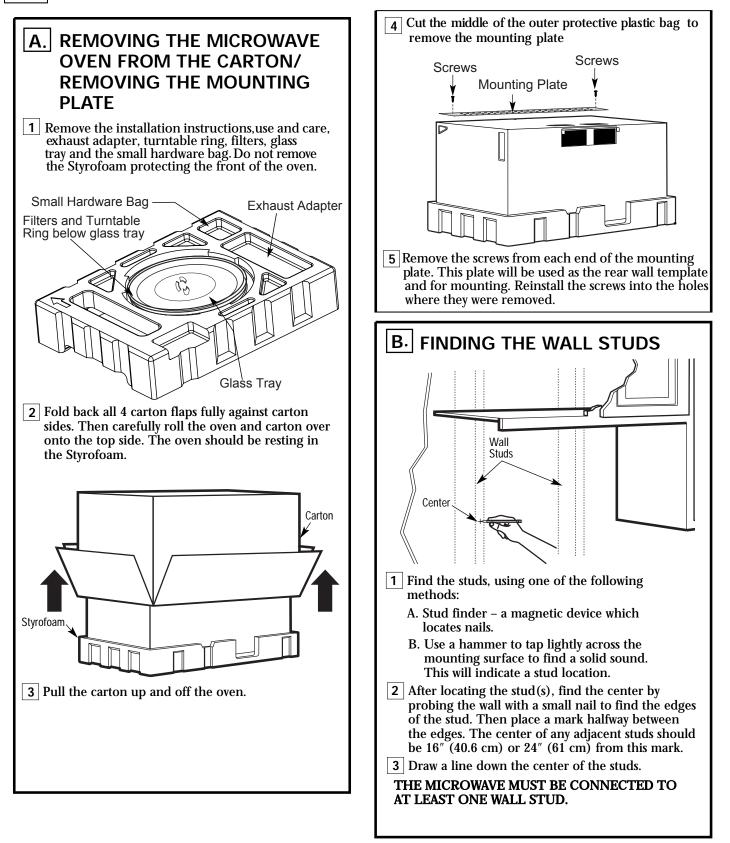

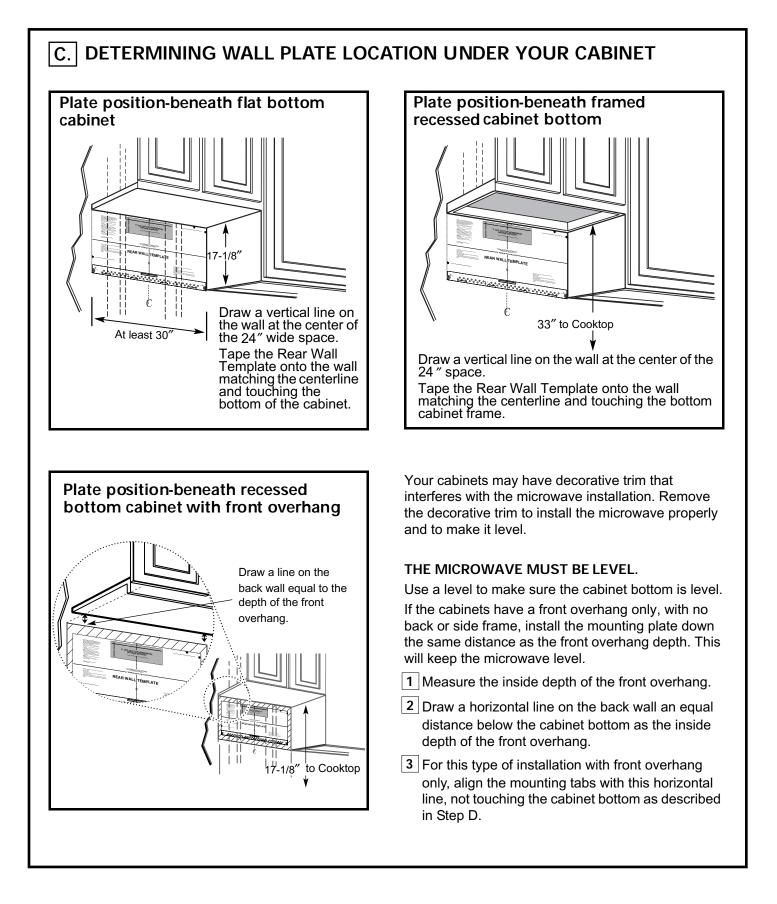

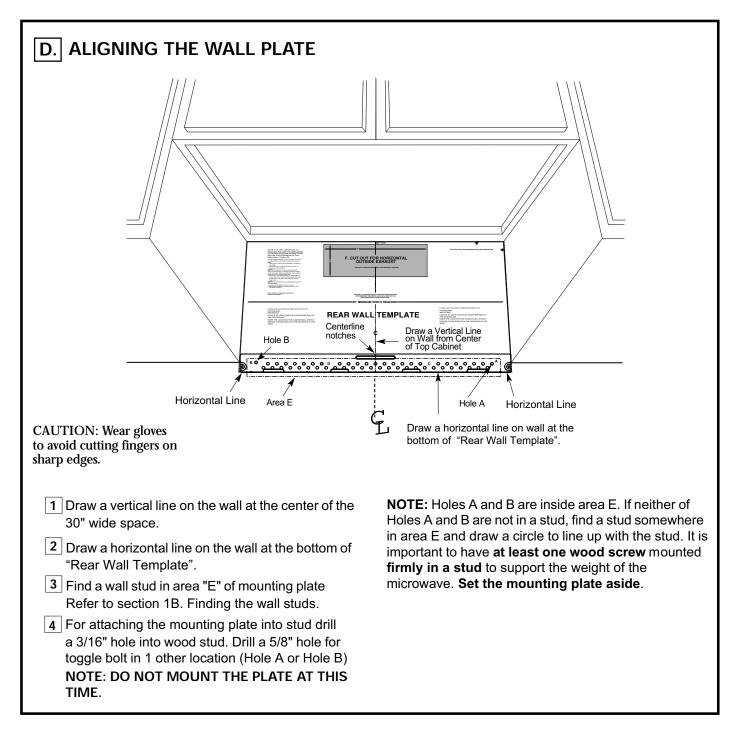

2

INSTALLATION TYPES (Choose A, B or C)


This microwave oven is designed for adaptation to

the following three types of ventilation: A. Outside Top Exhaust (Vertical Duct)


A. Outside Top Exhaust (Vertical Duct)

- B. Outside Back Exhaust (Horizontal Duct)
- C. Recirculating (Non-Vented Ductless)

NOTE: This microwave is shipped assembled for Recirculating. Select the type of ventilation required for your installation and proceed to that section.

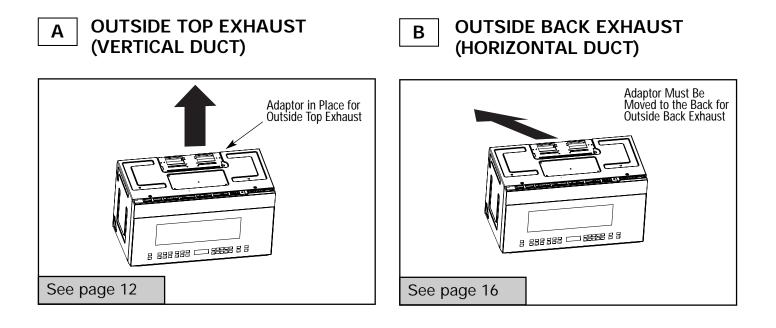

C RECIRCULATING (NON-VENTED DUCTLESS)

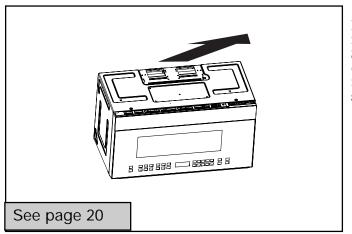

Models are shipped for recirculating exhaust. Some models have a disposable charcoal filter installed to help remove smoke and odors.

NOTE: Read the next two pages only if you plan to vent your exhaust to the outside. If you plan to recirculate the air back into the room, proceed to page 20.

Installation Instructions

INSTALLATION INSTRUCTIONS FOR EXTERNAL EXHAUST DUCTING

NOTE: If you need to install ducts, note that the total duct length of 3¹/₄" x 10" (8.2 x 25.4 cm) rectangular or 5" (12.7 cm) diameter / 6" (15.2 cm) diameter round duct **should not exceed 120 equivalent feet (36.5 m).**

Outside ventilation requires an EXTERNAL EXHAUST DUCT.Read the following carefully.

NOTE: It is important that venting be installed using the most direct route and with as few elbows as possible. This ensures clear venting of exhaust and helps prevent blockages. **Also, make sure dampers swing freely and nothing is blocking the ducts.**

Exhaust connection:

The exhaust adaptor has been designed to mate with a standard $3\frac{1}{4}$ " x 10" (8.2 x 25.4 cm) rectangular duct.

If a round duct is required, a rectangular-to-round transition adaptor must be used. A 5^w(12.7cm)/ 6^w (15.2cm) diameter duct is acceptable to use.

Maximum duct length:

For satisfactory air movement, the total duct length of $3\frac{1}{4}$ " x 10" (8.2 x 25.4 cm) rectangular or 5" (12.7 cm) diameter / 6 " (15.2 cm) diameter round duct **should not** exceed 120 equivalent feet (36.5 m).

Elbows, transitions, wall and roof caps,

etc., present additional resistance to airflow and are equivalent to a section of straight duct which is longer than their actual physical size. When calculating the total duct length, add the equivalent lengths of all transitions and adaptors plus the length of all straight duct sections. The chart below shows you how to calculate total equivalent ductwork length using the approximate feet of equivalent length of some typical ducts.

DUCT PIECES		EQUIVALENT LENGTH	x	NUMBER USED	=	EQUIVALENT LENGTH
	Rectangular-to-Round Transition Adaptor*	5 Ft. (1.5 m)	Х	()	=	Ft. or m
	Wall Cap	40 Ft. (12.2 m)	Х	()	Ξ	Ft. or m
	90° Elbow	10 Ft. (3 m)	Х	()	Ш	Ft. or m
	45° Elbow	5 Ft. (1.5 m)	Х	()	=	Ft. or m
	90° Elbow	25 Ft. (7.6 m)	х	()	Ш	Ft. or m
	45° Elbow	5 Ft. (1.5 m)	Х	()	=	Ft. or m
	Roof Cap	24 Ft. (7.3 m)	Х	()	=	Ft. or m
	Straight Duct 6" (15.2 cm) Round or 3 ¹ /4" x 10" (8.2 x 25.4 cm Rectangular)	1 Ft. (0.3 m)	Х	()	=	Ft. or m
			Tota	al Ductwork	=	Ft. or m

IMPORTANT: If a rectangular-to-round transition adaptor is used, the bottom corners of the damper will have to be cut to fit, using the tin snips, in order to allow free movement of the damper.

Equivalent lengths of duct pieces are based on actual tests and reflect requirements for good venting performance with any vent hood.

EXTERNAL EXHAUST DUCTING

OUTSIDE TOP EXHAUST (EXAMPLE ONLY)

The following chart describes an example of one possible ductwork installation.

$\langle \rangle$	DUCT PIECES		Equivalent Length	x	NUMBER USED	=	Equivalent Length
		Roof Cap	24 Ft. (7.3 m)	Х	(1)	=	24 Ft. (7.3 m)
		12 Ft. (3.6 m) Straight Duct (6"/15.2 cm Round)	12 Ft. (3.6 m)	Х	(1)	=	12 Ft. (3.6 m)
		Rectangular-to-Round Transition Adaptor*	5 Ft. (1.5 m)	х	(1)	=	5 Ft. (1.5 m)
	Equivalent lengths of duct pieces are based on actual tests and reflect requirements for good venting performance with any vent hood.				Total Length) =	41 Ft. (12.4 m)

will have to be cut to fit, using the tin snips, in order to allow free movement of the damper.


OUTSIDE BACK EXHAUST (EXAMPLE ONLY)

The following chart describes an example of one possible ductwork installation.

п	DUCT PIECES		EQUIVALENT LENGTH*	x	NUMBER USED	=	Equivalent Length
F		Wall Cap	40 Ft. (12.2 m)	Х	(1)	П	40 Ft. (12.2 m)
		3 Ft. Straight Duct (3¼″ x 10″/8.2 x 25.4 cm Rectangular)	3 Ft. (0.9 m)	Х	(1)	=	3 Ft. (0.9 m)
		90° Elbow	10 Ft. (3 m)	Х	(2)	П	20 Ft. (6 m)
	Equivalent lengths of duct pieces are based on actual tests and reflect requirements for good venting performance with any vent hood.				Total Length	=	63 Ft. (19.1 m)
	NOTE: For back exhaust, care should be taken to align exhaust with space between studs, or wall should be prepared						

at the time it is constructed by leaving enough space between the wall studs to accommodate exhaust.

A OUTSIDE TOP EXHAUST (Vertical Duct)

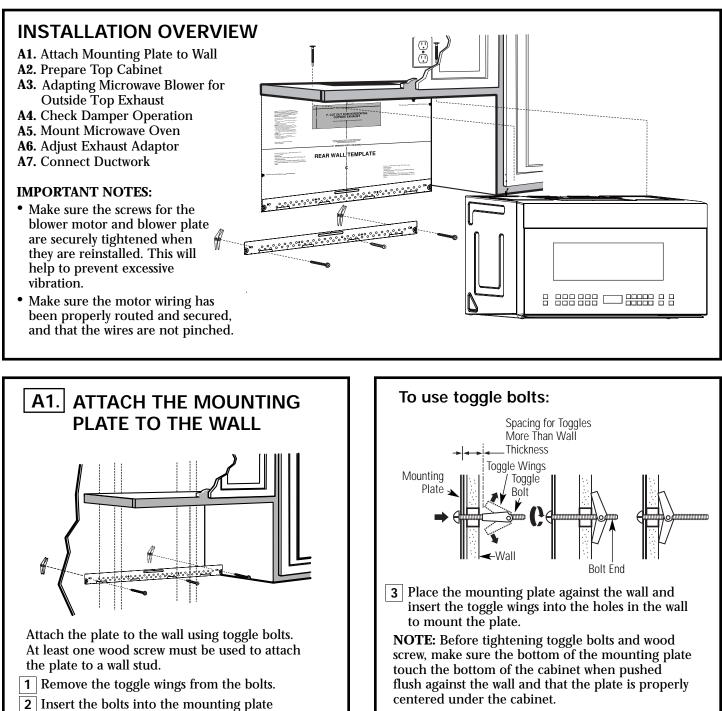

CAUTION: Be careful to avoid pinching fingers between the back of the mounting plate and the wall.

4 Tighten all bolts. Pull the plate away from the wall to help tighten the bolts.


through the holes designated to go into drywall

each bolt.

and reattach the toggle wings to $\frac{3}{4}$ " (19 mm) onto

A2. USE TOP CABINET TEMPLATE FOR PREPARATION OF TOP CABINET


You need to drill holes for the top support screws, a hole large enough for the power cord to fit through, and a cutout large enough for the exhaust adaptor.

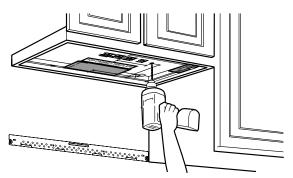



- Read the instructions on the TOP CABINET TEMPLATE.
- Tape it underneath the top cabinet.
- Drill the holes, following the instructions on the TOP CABINET TEMPLATE.


CAUTION: Wear safety goggles when drilling holes in the cabinet bottom.

A3. ADAPTING MICROWAVE BLOWER FOR OUTSIDE TOP EXHAUST Place the microwave in its upright position, with the top of the unit facing up.

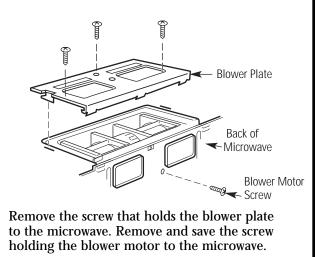


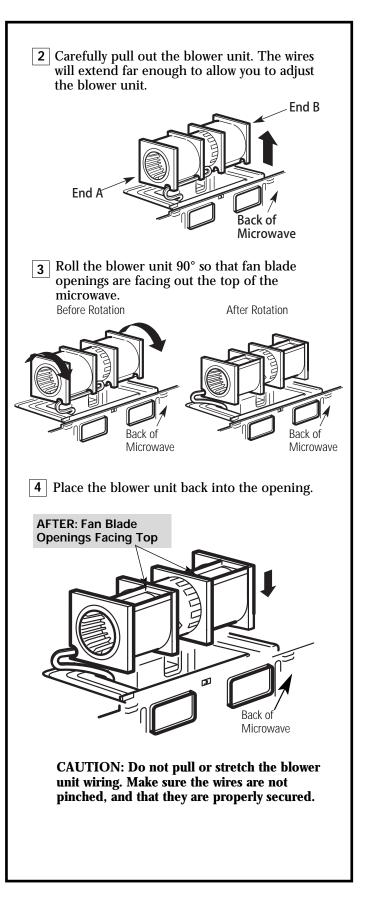

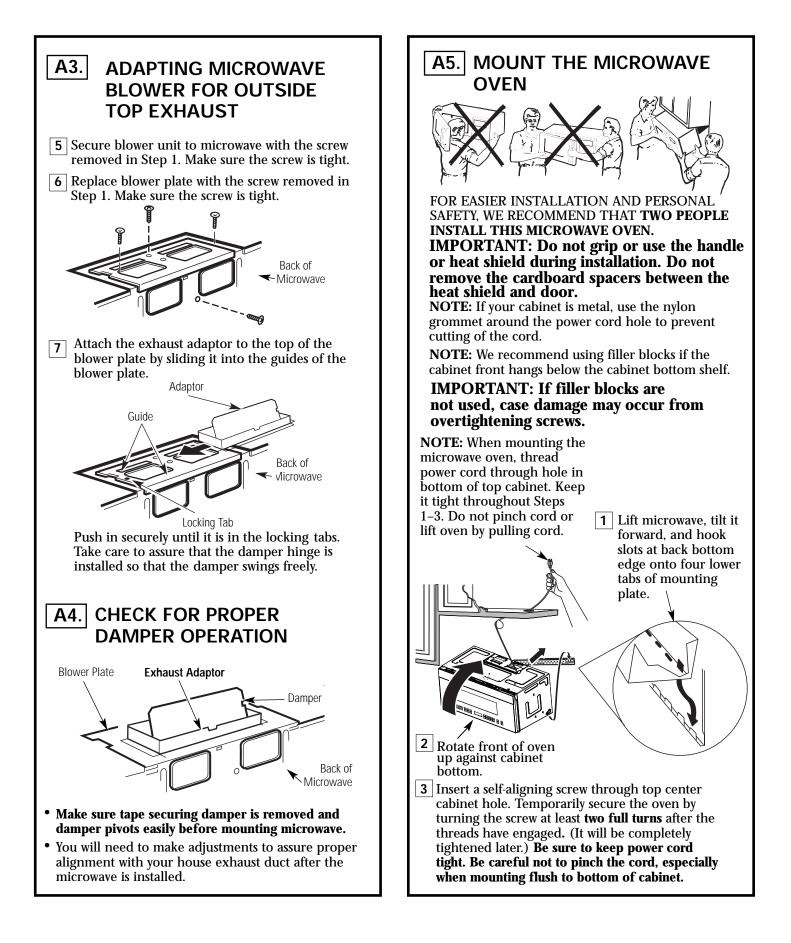

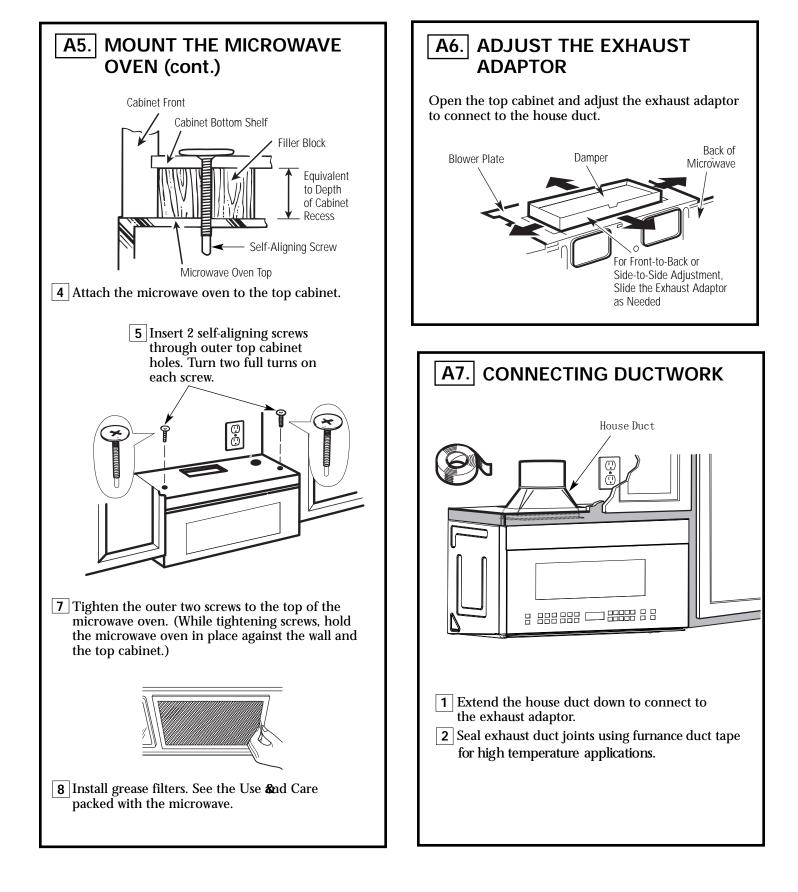


B OUTSIDE BACK EXHAUST (Horizontal Duct)

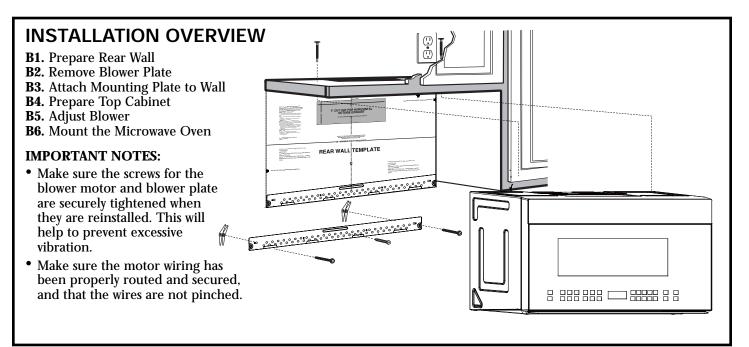

B1. PREPARING THE REAR WALL FOR OUTSIDE BACK EXHAUST


You need to cut an opening in the rear wall for outside exhaust.

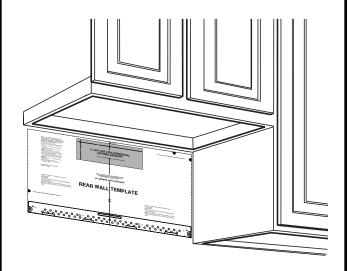


- Read the instructions on the REAR WALL TEMPLATE.
- Tape it to the rear wall.
- Cut the opening, following the instructions of the REAR WALL TEMPLATE.


B2. REMOVE BLOWER PLATE


Remove and save the screw that holds the blower plate to the microwave. Lift off the blower plate.

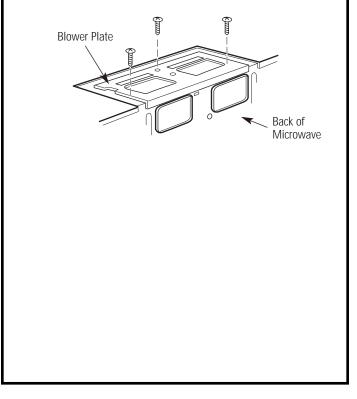

Installation Instructions

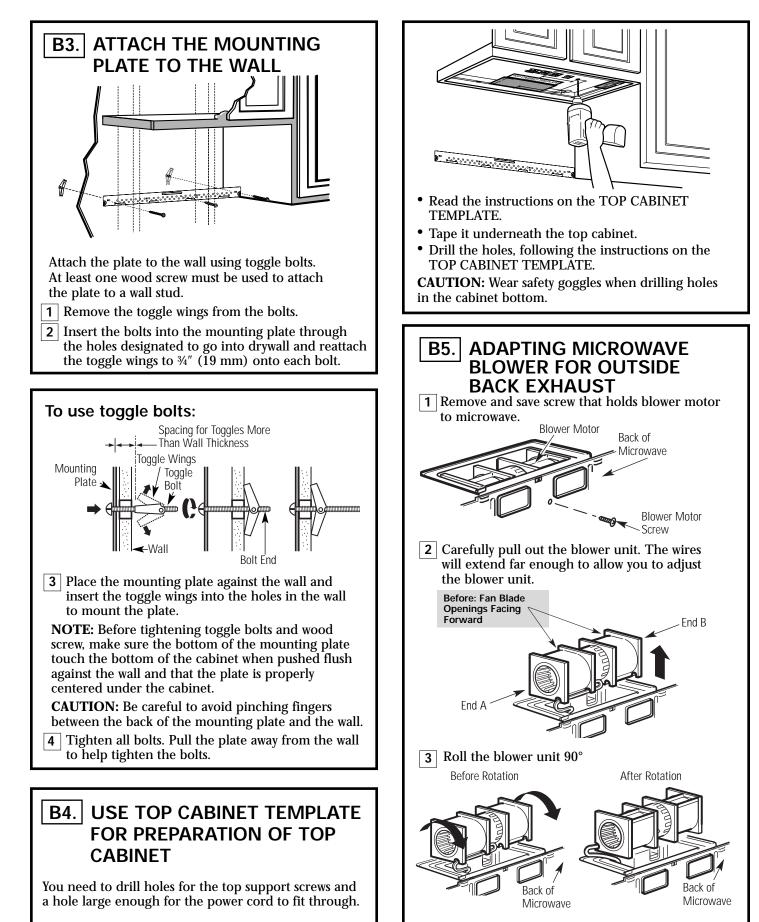

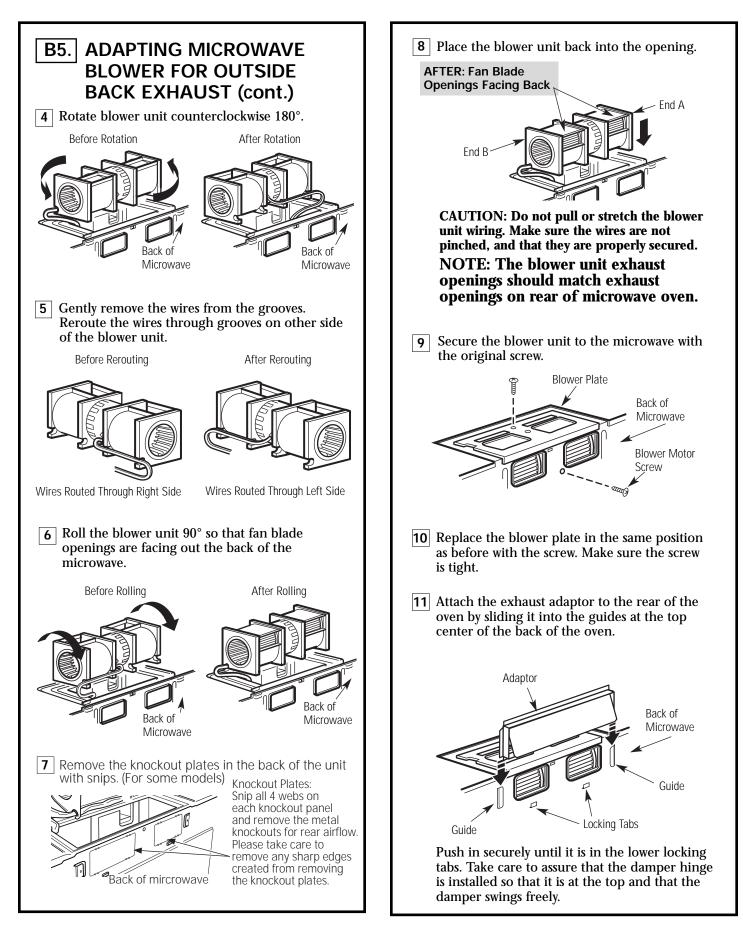

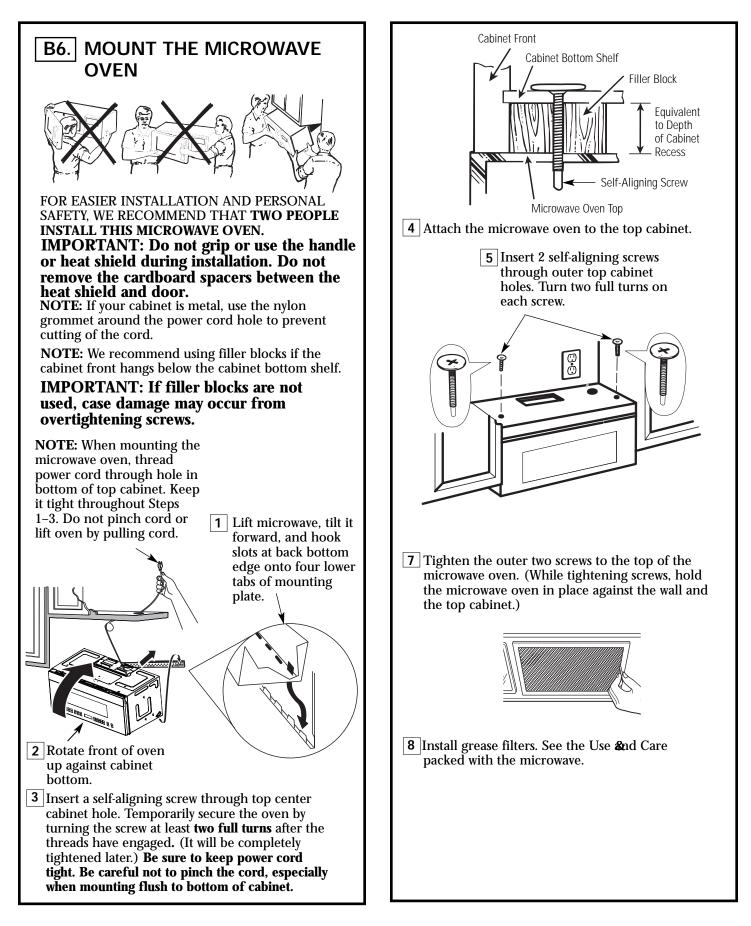


RECIRCULATING (Non-Vented Ductless)


INSTALLATION OVERVIEW

- C1. Attach Mounting Plate to Wall
- **C2.** Prepare Top Cabinet
- C3. Check Blower Plate
- C4. Mount the Microwave Oven
- C5. Install or change Charcoal Filter


IMPORTANT NOTES:

- Make sure the screws for the blower motor and blower plate are securely tightened when they are reinstalled. This will help to prevent excessive vibration.
- Make sure the motor wiring has been properly routed and secured, and that the wires are not pinched.

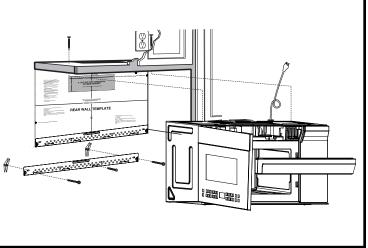

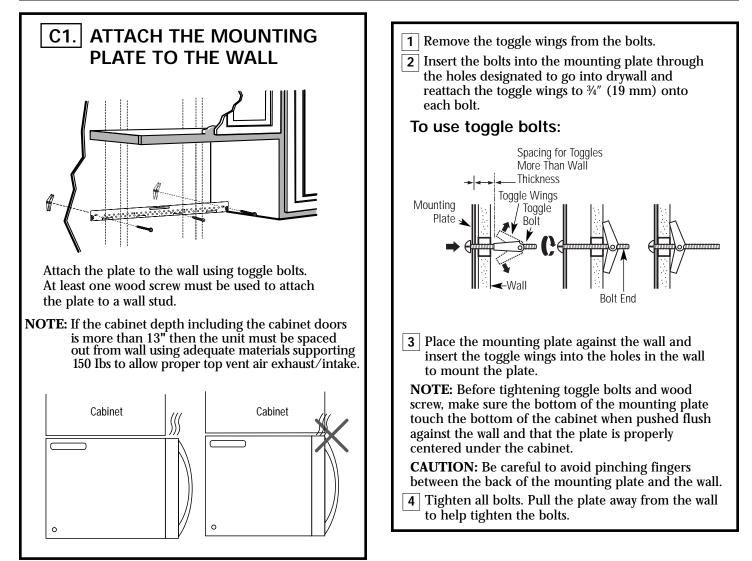



Installation Instructions

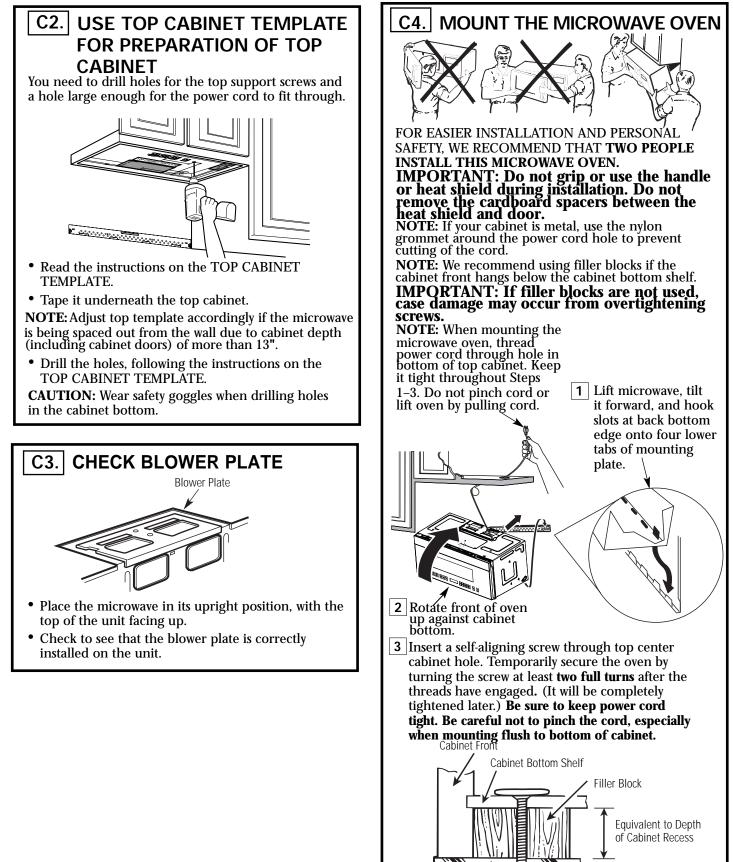


Self-Aligning Screw

Microwave Oven Top
Attach the microwave oven to the top cabinet.

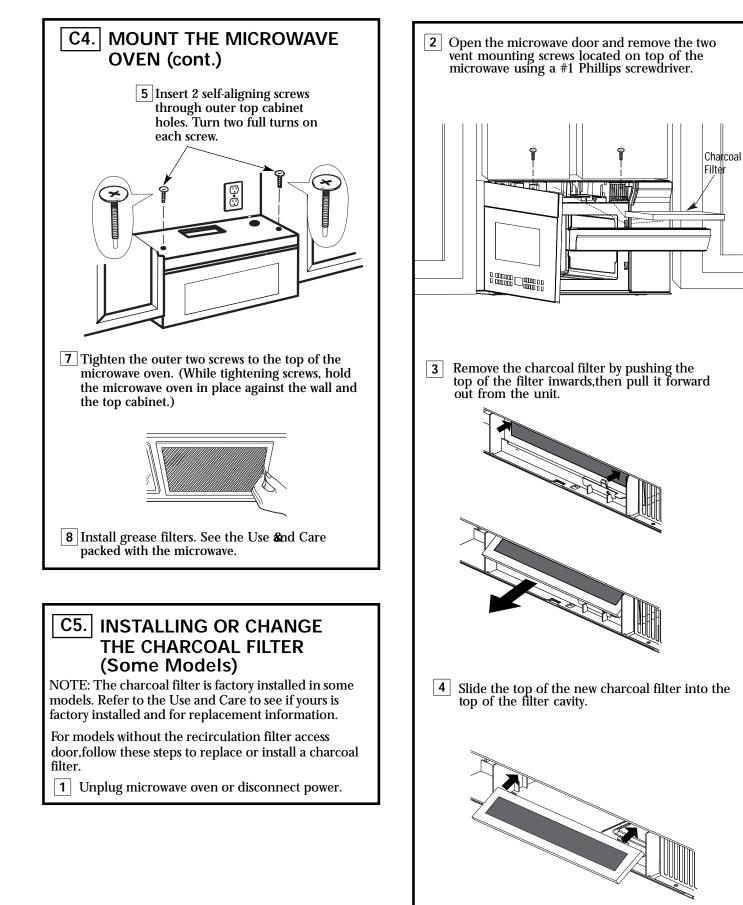

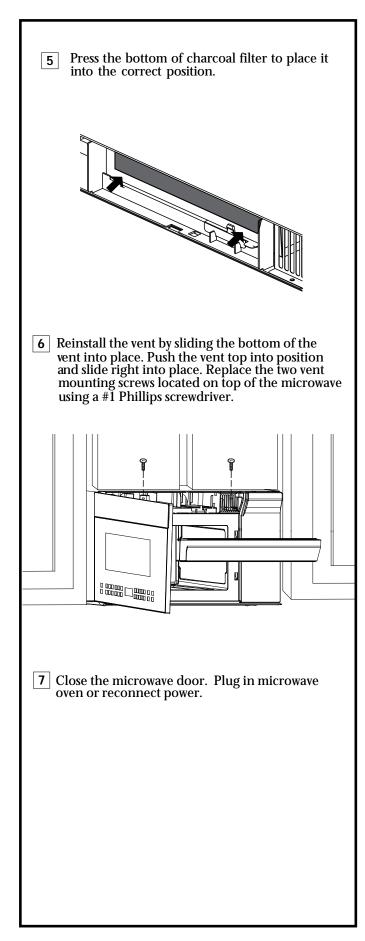

BEFORE YOU USE YOUR MICROWAVE

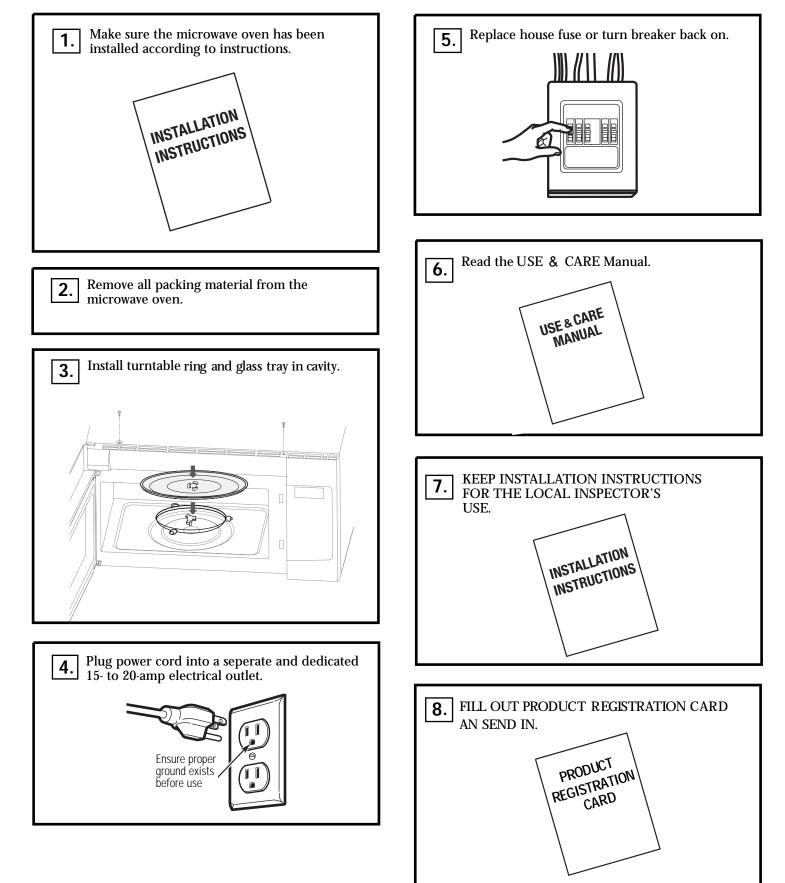

Operational check

- 1. Make sure the unit has been installed according to these instructions.
- 2. Remove all packing materials from the oven.
- 3. Replace house fuse or turn circuit breaker back on.
- 4. Plug power cord into receptacle .
- 5. Read operating instructions before testing the product.
- 6. Turn on the exhaust fan at Turbo speed and confirm it is operating by using a tissue (it will stick to the filter).
- 7. Confirm the outdoor exhaust flapper has opened.
- 8. Set the microwave oven for 1 minute and confirm the oven is operating normally using a cup of water.
- 9. Keep these installation instruction for the local electrical inspector's use.

